




INSTALLATION INSTRUCTIONS

Residual Current Device with Overcurrent Protection (RCBO)

Single module device suitable for use in Crabtree Starbreaker consumer units.

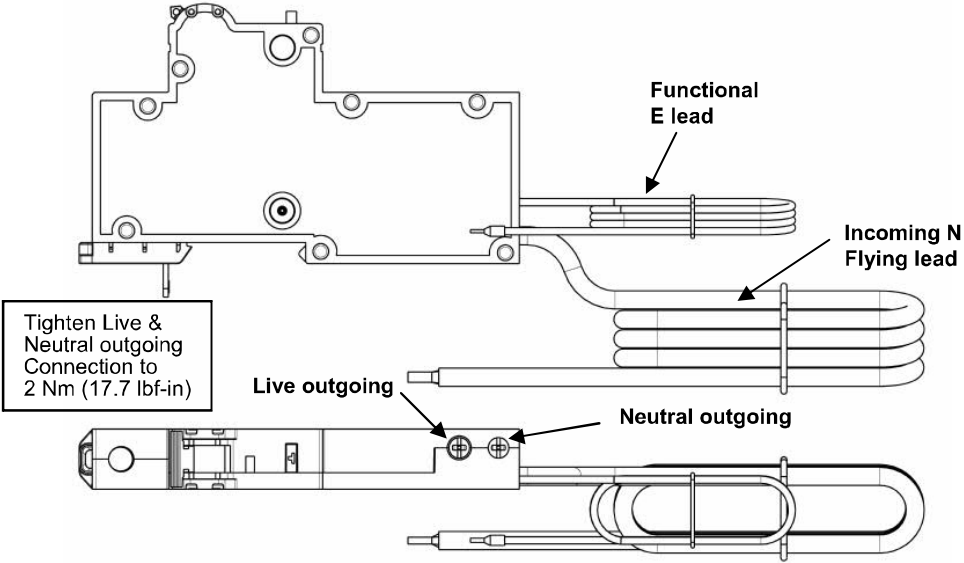

- 1) Plug the RCBO onto the DIN rail / busbar system. Ensure DIN rail clip is securely attached to DIN rail.
- 2) Route N flying lead to chosen N bar connection.
- 3) Route functional E flying lead to chosen E bar connection.
- 4) Connect L&N outgoing cables to top L and N terminals.
- 5) Check tightness of all connection and tighten to the required torque 2Nm (17.7 lbf-in)
DO NOT connect using power driven screwdrivers.
- 6) Test after installation. (DO NOT INSULATION RESISTANCE TEST THIS RCBO)

Waste electrical products should not be disposed of with household waste. Please recycle where waste disposal facilities exist. Check with your retailer, wholesaler or local authority for recycling advice.

