


INSTALLATIONINSTRUCTIONS

Residual Current Device with Overcurrent Protection (RCBO)

Single module device suitable for use in Wylex NH distribution boards.

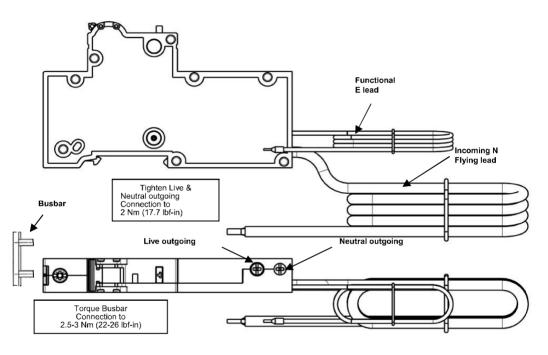

- 1) Fit to appropriate L busbar connection, using high level connection.
- 2) Route N flying lead to chosen N bar connection.
- 3) Route functional E flying lead to chosen E bar connection.
- 4) Connect L&N outgoing cables to top L and N terminals.
- Check tightness of all connection and tighten to the required torque (see above)
 DO NOT connect using power driven screwdrivers.
- 6) Test after installation. (DO NOT INSULATION RESISTANCE TEST THIS RCBO)

Waste electrical products should not be disposed of with household waste. Please recycle where waste disposal facilities exist.

Check with your retailer, wholes aler or local authority for recycling advice.



